

Wine Vault



(Features and Size May Vary)

User Manual

Model # 264 08 59 0Y

Y= 3 (Right Hinge) or 4 (Left Hinge)

PLEASE READ THIS MANUAL CAREFULLY BEFORE INSTALLING AND OPERATING

IMPORTANT SAFEGUARDS

When using this appliance, always exercise basic safety precautions, including the following:

- 1. Read all of the instructions before using this appliance.**
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. Use this appliance only for its intended purpose as described in this use and care guide.
5. This wine vault must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
6. Never unplug your wine vault by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
7. Unplug your wine vault before cleaning or before making any repairs. **Note:** If for any reason this product requires service, we strongly recommend that a certified technician performs the service.
8. The SUPPLY CORD cannot be replaced. If the cord is damaged the appliance should be scrapped.
9. This appliance is designed for free standing installation only.
10. If your old wine vault is not being used, we recommend that you remove the door and leave the shelves in place. This will reduce possibility of danger to children.
11. Do not operate your wine vault in the presence of explosive fumes.
12. Do not store foods in wine vault as interior temperature may not be cool enough to prevent spoilage or may cause bacteria growth.



SAVE THESE INSTRUCTIONS

DANGER

Risk of child entrapment.

Before you throw away your old Wine Vault, take off the doors.

Leave the shelves in place so that children may not easily climb inside.

Thank you for using our Wine Enthusiast product. This easy-to-use manual will guide you in getting the best use of your Wine Vault.

Please remember to record the model and serial number, they are on a label on inside wall of the Wine Vault.

Model number

Serial number

Date of purchase

Staple your receipt to this manual.

You will need the receipt to obtain warranty service.



Table of Contents

IMPORTANT SAFEGUARDS	2
SAVE THESE INSTRUCTIONS	3
Electrical Requirement	5
Install Limitations	5
Use of Extension Cords	5
Wine Vault Features and Use	6
Initial Setup	6
Before You Start	6
Temperature Adjustment.....	6
Shelving	6
Installing the Handle	9
Operating Your Wine Vault	9
Setting the Temperature Control	10
Replacing the Charcoal Filter.....	10
Interior Light.....	11
Normal Operating Sounds You May Hear.....	11
Technical Data	12
Proper Wine Vault Care and Cleaning	13
Troubleshooting.....	15
Limited Warranty.....	17



Electrical Requirement

- Make sure there is a suitable power Outlet (115 volts, 15 amps outlet) with proper grounding to power the wine vault.
- Avoid the use of three plug adapters or cutting off the third grounding in order to accommodate a two plug outlet. This is a dangerous practice since it provides no effective grounding for the wine vault and may result in shock hazard.

Install Limitations

- Do not install your wine vault in any location not properly insulated or heated e.g. garage etc. Your wine vault was not designed to operate in temperature settings below 50° Fahrenheit or above 100° Fahrenheit.
- Select a suitable location for the wine vault on a hard, even surface away from direct sunlight or heat source e.g. radiators, baseboard heaters, cooking appliances etc. Any floor unevenness should be corrected with the leveling legs located on the front and rear bottom corners of the wine vault.
- This appliance is designed for free standing installation only.

Use of Extension Cords

- Avoid the use of an extension cord because of potential safety hazards under certain conditions. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot outlet that will accept the plug. The marked rating of the extension cord must be equal to or greater than the electrical rating of the appliance.



Wine Vault Features and Use

Initial Setup

- Before connecting the wine vault to the power source, let it stand upright for approximately **24 hours**. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Once you have plugged the unit into an electrical outlet, let the unit run for at least 30 minutes to acclimate before making any adjustments.

Before You Start

The wine vault should be placed in a location where the ambient temperature is between 50 - 100 degrees Fahrenheit. If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause interior temperatures to fluctuate.

Temperature Adjustment

- When the wine vault is plugged in for the first time, the LED display will show the factory preset temperature.
- The wine vault can be set to any temperature between 41° and 66°F to accommodate your wine storage requirements. To set the temperature, press the up or down arrow button to increase or decrease the temperature setting until the desired temperature is attained. It may take some time to reach the set temperature.

Shelving

(Type and number of shelves will vary per model)

Your cabinet was designed to store a maximum number of bottles securely. We recommend that you observe the tips below to optimize loading:

- Remove packing materials once unit is stable and ready for storage.




- Disperse the bottles evenly to avoid concentrating weight in one place. Bottles must not touch either the back of the cabinet or the step at the bottom.
- Make sure that the bottles are not all grouped together either at the top or bottom of the cabinet.
- Only pull out one rolling shelf at a time. Never attempt to pull more than one.
- **Maximum weight capacity per shelf is 100 lbs.** You can increase your wine vault's storage capacity by removing shelves and stacking bottles on top of one another.
- Do not stack more than 4 rows of bottles per shelf.

Removing the Shelf

To remove a rolling shelf:

1. Remove all bottles.
2. Pull the shelf out as far as it will go.
3. Push the left side lever downward while pushing the right side lever upwards (as illustrated below).
4. Remove the shelf.

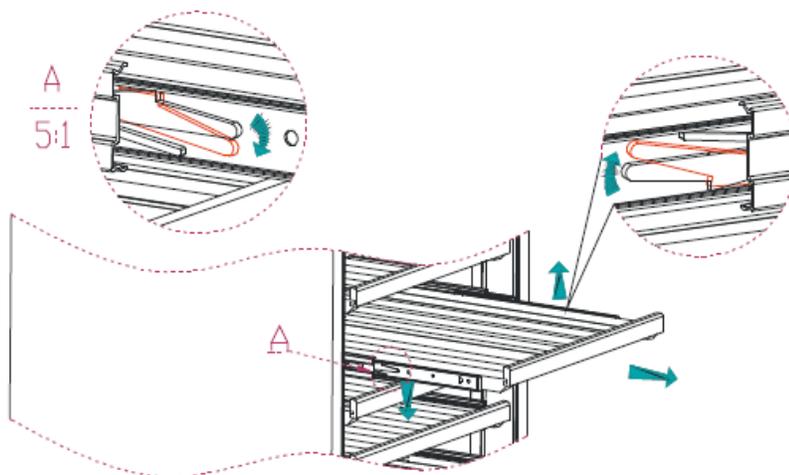


Rearranging the Shelf Layout

You can rearrange the configuration of your wine vault by moving the location of your shelf brackets. To move a sliding shelf, first remove all bottles then remove the rolling shelf as illustrated above. You are now ready to remove the shelf guide rails.

To remove shelf slide rails:

1. Fully extend out the guide rail.
2. Lift the front of the guide rail upwards to separate from the wine vault wall.
3. Pull guide rail towards you to completely release from wine vault.
4. Do not mix up the left and right guide rails.

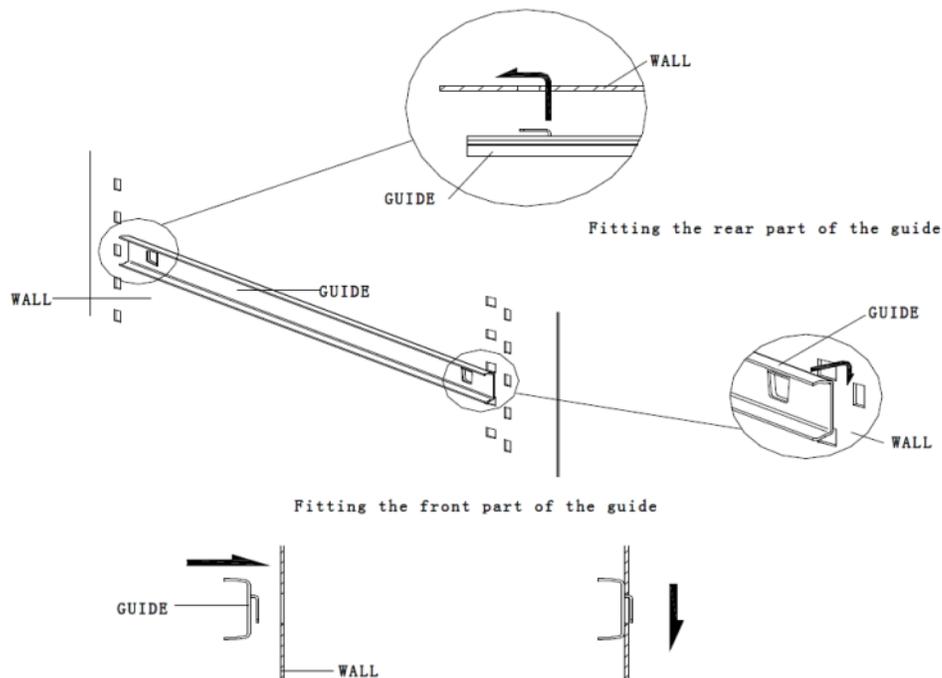


Reposition guide rail to the new location and reinstall in reverse order.




Installing the Handle

1. Pull back the door seal behind handle location.
2. Insert screws into pre-drilled screw holes.
3. Attach handle and tighten screws.
4. Press door seal back into place.

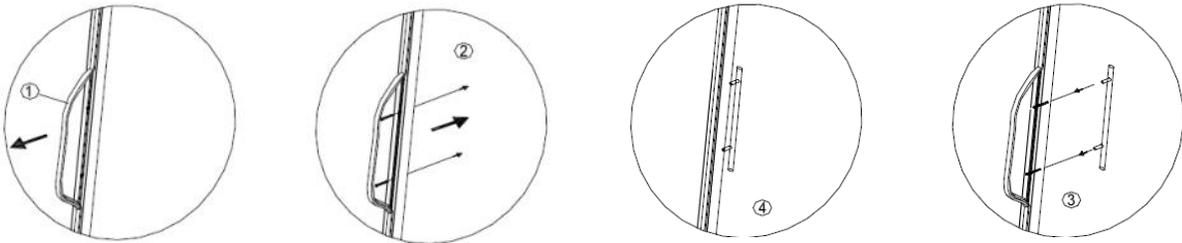

Operating Your Wine Vault

Each wine vault includes an operating panel on the front of the unit. This operating panel includes several features to operate and control the temperature.

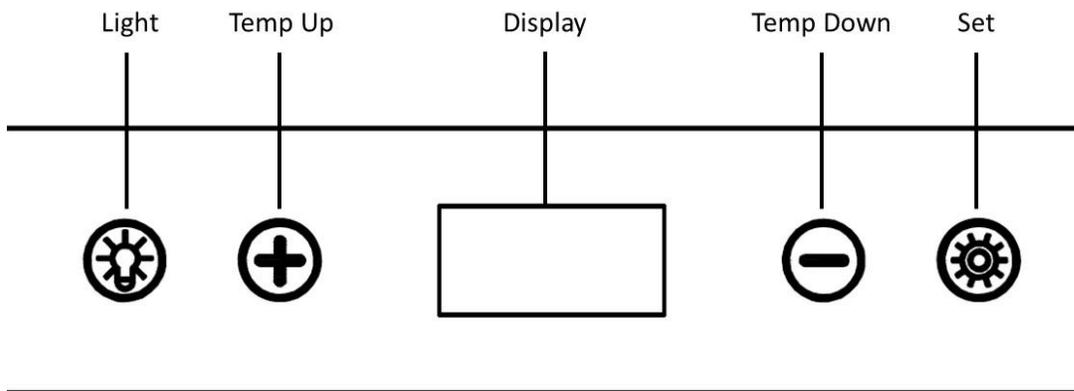

Light:	Turns the Interior Light ON and OFF
Display Window:	Displays Temperatures
Temp Up	Increases Temperature
Temp Down	Decreases Temperature
Set:	Press the temperature SET button, the temperature display will start flashing. Use the Temp Up and Temp Down buttons to adjust the temperature
°C/°F:	Press and Hold the LIGHT button for 3 seconds to toggle the display between Celsius and Fahrenheit

Setting the Temperature Control


NOTE: Temperature readout indicates set temperature while programming then reverts to the actual temperature.

1. Press the SET button, the temperature display will start flashing.
2. Set the desired temperature by pushing the Temp UP or DOWN button.
3. Temperatures increase or decrease 1°F with each push of the UP or DOWN button.

NOTE: Temperatures may fluctuate depending on whether the interior light is ON or OFF and depending on the position of the bottles.

Replacing the Charcoal Filter

Located on the back wall of your wine cellar, Turn counterclockwise to unlock, then remove. Replace with a new filter, turn clockwise to lock in place. Reorder part #: 264 08 44 at www.WineEnthusiast.com

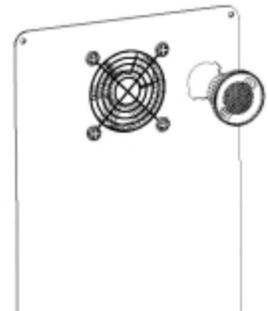

Temperature Settings for Serving Wine

Although optimal storage temperature is generally regarded to be 53-57°F, different varietals of wine require different service temperature settings. The recommended temperature ranges for serving different varietals of wine are listed below. Your Wine Vault will indicate when you have set the Upper/Lower zones to the below temperature ranges.

Red Wines:	60-66°F
White Wines	45-52°F
Sparkling Wines	40-45°F

Interior Light

- To complement the look of your wine collection, a soft light has been built into the Wine Vault. Simply push the "Light" button and the light comes on, push again for off. For maximum energy efficiency, leave light off when not viewing your collection.

Normal Operating Sounds You May Hear

- Boiling water, gurgling sounds or slight vibrations that are the result of the refrigerant circulating through the cooling coils.
- The thermostat control will click when it cycles on and off.



Technical Data

	Classic XL Wine Vault
Total Volume	26.84 Cu. Ft.
Installation	Free-Standing Only
Power	115V~60Hz
Current	2.1A
Protection Class	I
Climate Class	N/ST
Start-Up Amps	12A
Ambient Temperature	50°F - 100°F
Refrigerant	R600a – 2.47 oz.
Temperature Control Range	41°F - 72°F
Approx. Net Weight	325 LBS
Dimensions (H x W x D)	79-1/2" x 31-1/2" x 29-1/2"



Intertek
3155528

CONFORMS TO UL STD. 60335-1 and 60335-2-24

CERTIFIED TO CSA STD. C22.2 NO.60335-1 and 60335-2-24



Proper Wine Vault Care and Cleaning

Cleaning and Maintenance

Warning: To avoid electric shock always unplug your Wine Vault before cleaning. Ignoring this warning may result in death or injury.

Caution: Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

General:

- Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution, to wipe down your Wine Vault.
- Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your Wine Vault.

Mold on the interior

Microscopic mold spores are naturally occurring and present in the ambient air. When mold gets in your wine cellar it may grow within the humid environment. Removal can be completed with mild solutions of commonly available products such as Borax, vinegar, or baking soda.



Door Gaskets:

- Clean door gaskets every three months according to general instructions. Gaskets must be kept clean and pliable to assure a proper seal.
- Petroleum jelly applied lightly on the hinge side of gaskets will keep the gasket pliable and assure a good seal.

Power Interruptions

- Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When power has been restored, **wait 3 to 5 minutes** then re-plug the power cord to AC outlet.

Vacation and Moving Care

- For long vacations or absences, unplug the Wine Vault and clean the Wine Vault and door gaskets according to "General cleaning" section. Leave doors open, so air can circulate inside.
- When moving always move the Wine Vault vertically. Do not move with the unit lying down, as possible damage to the sealed system could occur.

Note: After moving, wait for 24 hours before plugging in the wine vault.



Troubleshooting

Many common issues with your wine vault can be easily solved. Try the troubleshooting tips below if you experience any problems.

Wine Vault Does Not Operate:

- Check if wine vault is plugged in.
- Check if there is power in the AC outlet, by checking the circuit breaker.

Wine appears too warm:

- Frequent door openings.
- Allow time for recently added wine to reach desired temperature.
- Check gaskets for proper seal.
- Clean condenser coils.
- Adjust temperature control to colder setting.

Wine temperature is too cold:

- If temperature control setting is too cold, adjust to a warmer setting.

Wine Vault runs too frequently:

- This may be normal to maintain constant temperature during high temperature and humid days.
- Doors may have been opened frequently or for an extended period of time.
- Clean condenser coils.
- Check gasket for proper seal.



- Check to see if doors are completely closed.

Moisture build-up on interior or exterior of the wine vault:

- This is normal during high humidity periods.
- Prolonged or frequent door openings.
- Check door gaskets for proper seal.

Wine Vault door does not shut properly:

- Level the Wine Vault.
- Check for blockages e.g. wine bottles, shelves.



Limited Warranty

This Warranty Covers Appliances Within The Continental United States Only.

Length of Warranty: This Limited Warranty lasts for one (1) year from date of receipt of purchase of the wine vault ("Limited Warranty Period") and the sealed system (compressor, condenser, evaporator) will be covered for three (3) years. Extended warranties may be available for an additional cost at the time of purchase or up to 30 days from date of purchase. These extended warranties would extend this one (1) year limited warranty to two (2), three (3), or five (5) years. Details about our extended protection plans can be found @ wineenthusiast.com.

Who is Protected: This Limited Warranty protects the original purchaser during the Limited Warranty Period, provided that such purchaser can present appropriate proof of original purchase.

What is Covered: This Limited Warranty covers any defects in workmanship or materials in your new wine vault under normal use.

What is Not Covered: The following are not covered by this Limited Warranty damage due to such things as accident, misuse, abuse, mishandling, neglect, unauthorized repair, failure to properly maintain, acts of God or any other cause beyond the reasonable control of the Wine Enthusiast whether similar or dissimilar to the foregoing.

Commercial use or use other than normal household or small office.

Purchaser understands and acknowledges that the wine vault is a wine refrigerator, which houses wine. Purchaser assumes all the risk of using these units, including risk of spoilage, humidity variations, temperature variations, leaks, fires, water damage, mold, mildew, dryness and similar perils that may occur.

What We Will Do: During the Limited Warranty Period, Wine Enthusiast and/or the manufacturer will, at its sole discretion, repair or replace any wine vault not operating within the manufacturer's specifications. All costs for labor and materials thereto shall be covered during the Limited Warranty Period. If Wine Enthusiast deems the wine vault is not repairable, Wine Enthusiast will use the value of your original order toward a replacement; provided, however, that the purchaser will be responsible for all shipping and handling costs with respect to the replacement after the



initial ninety (90) days after the date of receipt of original purchase. ***After the initial ninety (90) day period after the date of receipt of purchase, purchaser must pay any shipping and handling charges that are incurred in shipping or transporting the wine vault for service under this Limited Warranty.*** Wine Enthusiast reserves the right to substitute materials of substantially similar quality in the event that identical materials are not available at the time the Limited Warranty services are performed. Wine Enthusiast reserves the right to request that purchaser contact a local refrigeration company to service the wine vault.

How to get Warranty Service: In the event your wine vault is not operating within the manufacturer's specifications, during the Warranty Period, contact customer service by email at custserv@WineEnthusiast.net or by phone 800.648.6058.

Limitation of Implied Warranties: All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this Limited Warranty.

Exclusion of Certain Damages: Wine Enthusiast's liability is limited to replacement or repair of the defective wine vault. Wine Enthusiast shall not be liable for any damages, whether incidental, consequential or otherwise, because of any defective wine vault.

How State Law Applies: Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you. The Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Wine Enthusiast

Valhalla, NY 10595

