



WINE ENTHUSIAST[®]

VinoView[®] L

Smart Wi-Fi Wine Cellars



Wi-Fi Enabled

Use and Care Manual

FEATURES AND SIZES MAY VARY. PLEASE READ THIS MANUAL CAREFULLY BEFORE INSTALLING AND OPERATING.

SAVE THESE INSTRUCTIONS.

A Message from Wine Enthusiast:

Thank you for purchasing your wine cellar from Wine Enthusiast. We have been dedicated to developing and offering the best selection of wine products for more than 40 years. Our devoted team of wine experts apply their knowledge and passion to develop high-quality, innovative cellars to protect and showcase wines for every wine drinker. Thoughtfully designed for style, function and performance, your wine cellar will be a welcome part of your home you'll enjoy for years.

We appreciate you choosing Wine Enthusiast for your wine storage needs and look forward to delivering the best products and service to you.

Welcome to the Wine Enthusiast!

Keep for Your Records

Staple your receipt to your manual. **You will need the receipt to obtain warranty service.**

Model Number

Serial Number

Date of Purchase

QUESTIONS?

For toll-free telephone support in the U.S. and Canada, call **800.648.6058**

For online support and internet product information:
WineEnthusiast.com

This easy-to-use manual will guide you in getting the best use of your wine cellar. Please remember to record the model and serial number. They are located inside the cabinet on a label on the bottom right side. The following model numbers are referenced in this Use and Care Manual.

Single Zone Models:

269 06 88 03 W		269 08 88 03 W		269 09 888 WK2		269 09 8888 WK2
269 06 88 04 W		269 08 88 04 W		269 08 888 WK2		269 08 8888 WK2

Dual Zone Models:

269 06 84 03 WK2		269 08 84 03 WK2		269 08 844 WK2		269 06 8444 WK2
269 06 84 04 WK2		269 08 84 04 WK2		269 06 844 WK2		269 08 8444 WK2

Table of Contents

- Important Safeguards..... 3
- Safety Precautions..... 4
- Wine Cellar Features and Use..... 5
 - Initial Setup..... 5
 - Temperature Adjustment 5
 - VinoView® Shelving (type and number of shelves will vary per model)..... 6
 - Removing the Rolling Shelf..... 6
- Installation as a Built-In Wine Cellar..... 7
- Installing the Handle..... 8
- Operating Your Wine Cellar 8
 - Control Panel Display and Icon Glossary 9
 - Before You Start..... 10
 - Setting the Temperature Control..... 10
 - Lock or Unlock the Control Panel 10
 - Interior Light..... 10
 - Adjusting the Light Intensity 11
 - Door Lock..... 11
 - Normal Operating Sounds You May Hear 11
 - Wi-Fi Pairing..... 11
- Installing the App..... 12
- How to Connect Your Wine Cellars..... 13
- Technical Data 15
- Proper Wine Cellar Care, Cleaning and Maintenance..... 16
- Troubleshooting Guide..... 17
- Limited Warranty 18

Important Safeguards

When using this appliance, always exercise basic safety precautions, including the following:

1. **Read all of the instructions before using this appliance.**
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. Use this appliance only for its intended purpose as described in this use and care guide.
5. This wine cellar must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
6. Never unplug your wine cellar by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
7. Unplug your wine cellar before cleaning or before making any repairs. **Note:** If for any reason this product requires service, we strongly recommend that a certified technician performs the service.
8. The SUPPLY CORD cannot be replaced. If the cord is damaged the appliance should be scrapped.
9. This appliance is designed for freestanding installation or can be recessed into cabinetry.
10. **DANGER: Risk of Child Entrapment!** Before you throw away your old wine cellar, take off the doors. Leave the shelves in place so that children may not easily climb inside.
11. Do not operate your wine cellar in the presence of explosive fumes.
12. Do not store foods in wine cellar as interior temperature may not be cool enough to prevent spoilage or may cause bacteria growth.



DANGER

Risk of child entrapment! Before you throw away your old wine cellar, take off the doors. Leave the shelves in place so that children may not easily climb inside.

Safety Precautions

Electrical Requirement

- Make sure there is a suitable power outlet with proper grounding to power the wine cellar.
- Avoid the use of three plug adapters or cutting off the third grounding in order to accommodate a two plug outlet. This is a dangerous practice since it provides no effective grounding for the wine cellar and may result in shock hazard.

Install Limitations

- Do not install your wine cellar in any location not properly insulated or heated e.g. garage etc. Your wine cellar was not designed to operate in temperature settings below 61° Fahrenheit.
- Select a suitable location for the wine cellar on a hard even surface away from direct sunlight or heat source e.g. radiators, baseboard heaters, cooking appliances etc. Any floor unevenness should be corrected with the leveling legs located on the front and rear bottom corners of the wine cellar.
- This appliance is designed for freestanding installation or can be recessed into cabinetry.

Use of Extension Cords

- Avoid the use of an extension cord because of potential safety hazards under certain conditions. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot outlet that will accept the plug. The marked rating of the extension cord must be equal to or greater than the electrical rating of the appliance.



WARNING!

Keep packaging materials away from children. Polythene sheets and bags can cause suffocation!

If possible, please recycle packaging material at a recycling facility.


CAUTION!

To avoid risk of personal injury or property damage when setting up, have two people unpack and move this appliance into place.

WARNING!

The refrigerant R600a contained within the appliance is environmentally friendly, but flammable. Leaking refrigerant can ignite.

Wine Cellar Features and Use

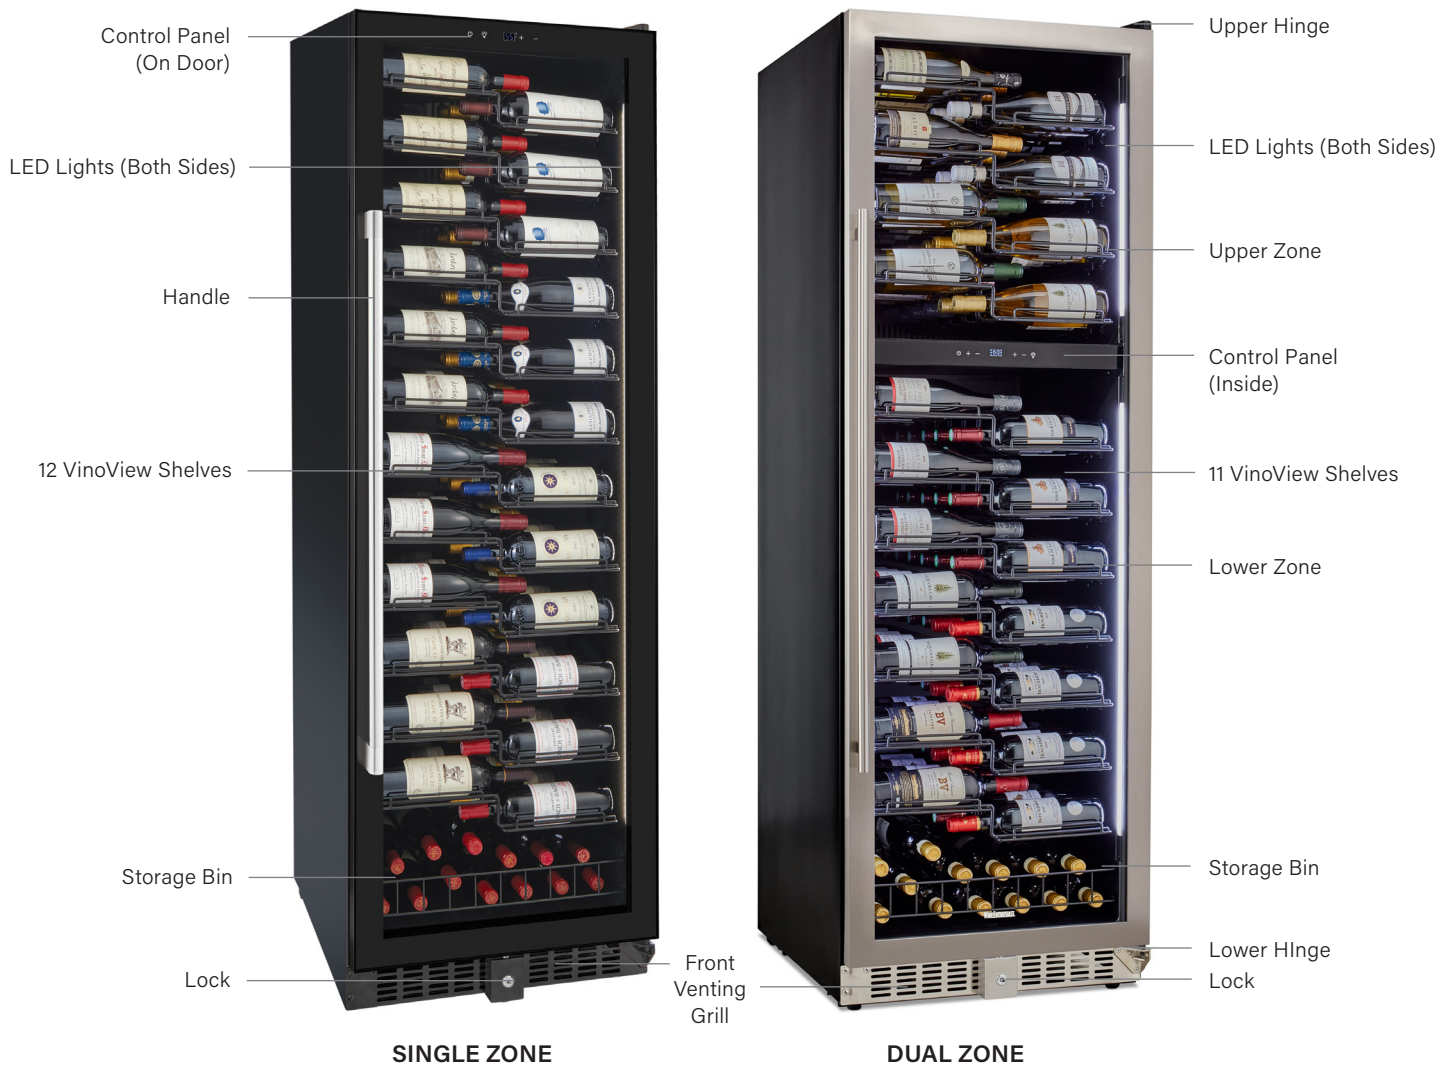

Initial Setup

- **Before connecting the wine cellar to the power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.**
- Once you have plugged the unit into an electrical outlet, let the unit run for at least 30 minutes to acclimate before making any adjustments.

Temperature Adjustment

- The wine cellar can be set to accommodate your wine storage requirements. To set the temperature, press the up or down arrow button to increase or decrease the temperature setting until the desired temperature is attained. It may take some time to reach the set temperature.
- The temperature will fluctuate more so when the wine cellar is empty.

VinoView® Shelving


(Type and number of shelves will vary per model)

Your wine cabinet was designed with our patented (U.S. Design Patent No. D847,220) VinoView shelving allowing you to showcase your prized wines and easily view your collection. We recommend that you observe the tips below to optimize loading and performance:

- Remove all packing materials from shelves once unit is stable and ready for bottle storage.
- Disperse the bottles evenly to avoid concentrating weight in one place. Bottles must not touch either the back of the cabinet or the step at the bottom. While your wine cellar was designed to hold large format bottles, such as Pinot Noir, larger bottles could reduce the number of bottles you can fit on a shelf.
- Make sure that the bottles are not all grouped together either at the top or bottom of the cabinet.
- Only pull out one shelf at a time, never attempt to pull out more than one.
- **Maximum weight capacity per shelf is 50 lbs.**


Removing the Rolling Shelf

1. Remove all bottles.
2. Pull the shelf out as far as it will go.
3. Push the left side lever downward while pushing the right side lever upwards (as illustrated below).

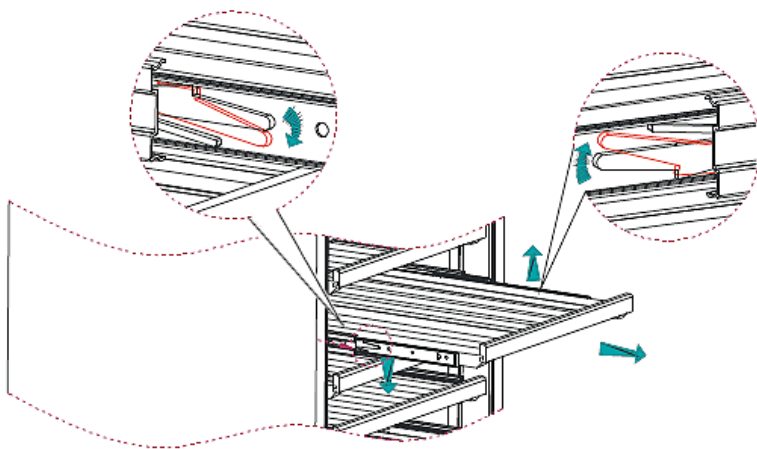



SINGLE ZONE

155 Bottles

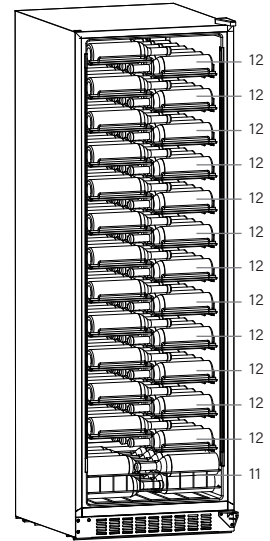

DUAL ZONE


145 Bottles

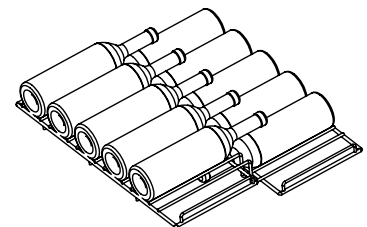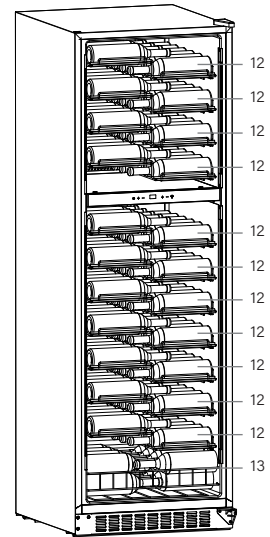

Each shelf holds 12 bottles.

Installation as a Built-In Cellar

These cut out dimensions show the minimum space required for your wine cellar to perform as designed.

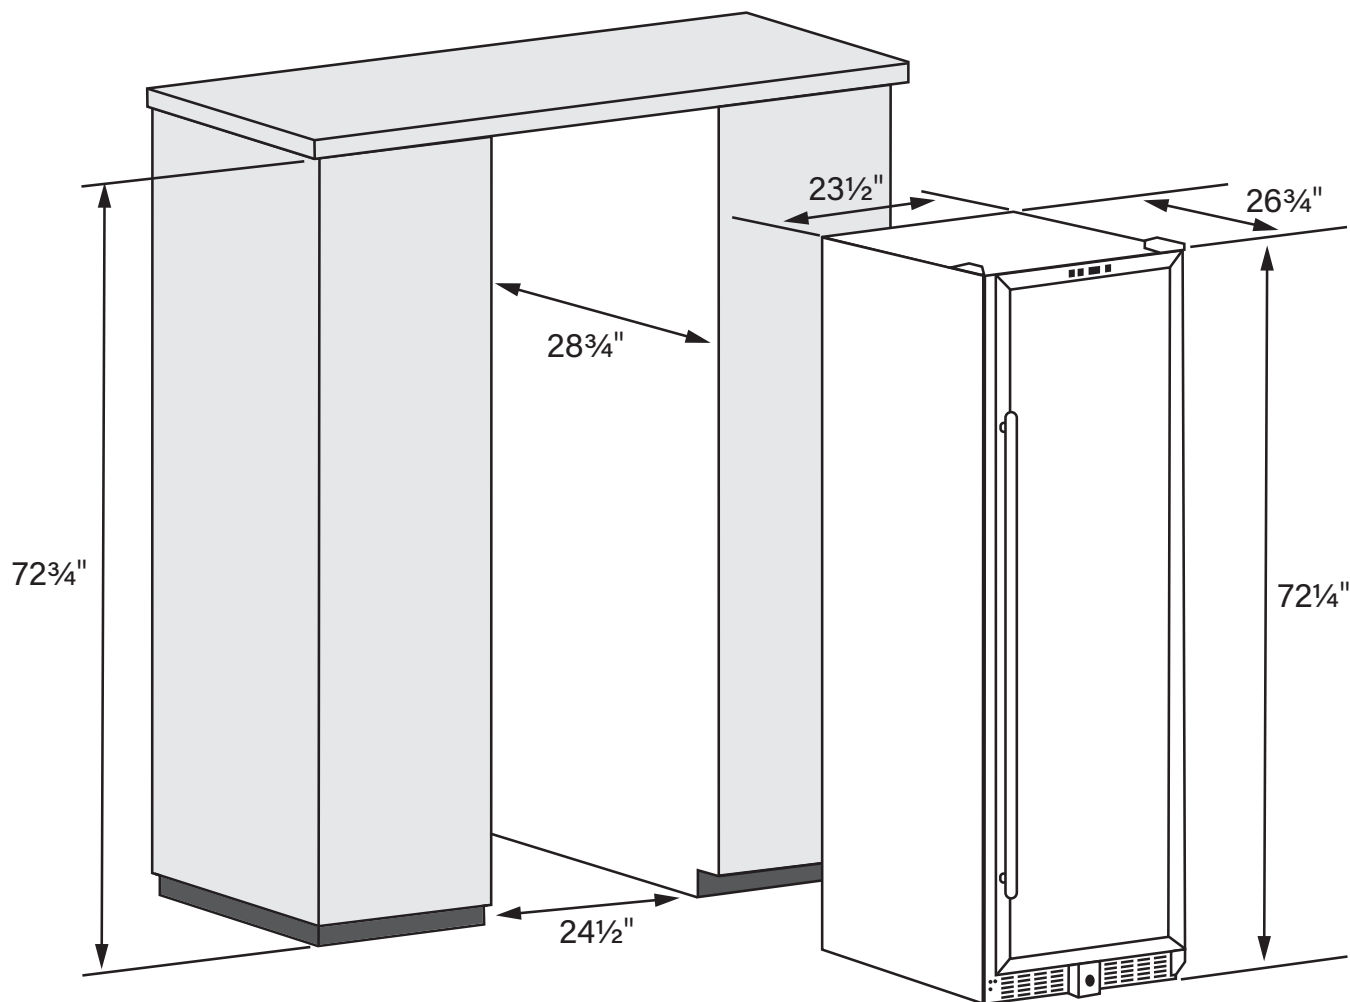


VINOVIEW L		
MODEL	CELLAR DIMENSIONS	DIMENSIONS OF BUILT-IN AREA
SINGLE UNIT	72 ³ / ₄ "H x 23 ¹ / ₂ "W x 26 ³ / ₄ "D*	72 ³ / ₄ "H x 24 ¹ / ₂ "W x 28 ³ / ₄ "D
DOUBLE UNIT**	72 ¹ / ₄ "H x 47"W x 26 ³ / ₄ "D*	72 ³ / ₄ "H x 48"W x 28 ³ / ₄ "D
QUAD UNIT**	72 ¹ / ₄ "H x 94"W x 26 ³ / ₄ "D*	72 ³ / ₄ "H x 95"W x 28 ³ / ₄ "D

* Handle adds 2" to depth.

** PLEASE NOTE, this wine cellar is actually multiple single units, side by side, with opposite hinged doors. Each unit will have its own power cord and every two units combined electric power requires a dedicated 20 amp outlet.


Installing the Handle

1. Pull back the door seal/gasket behind handle location.
2. Insert screws into pre-drilled screw holes.
3. Attach handle and tighten screws.
4. Press door seal back into place.

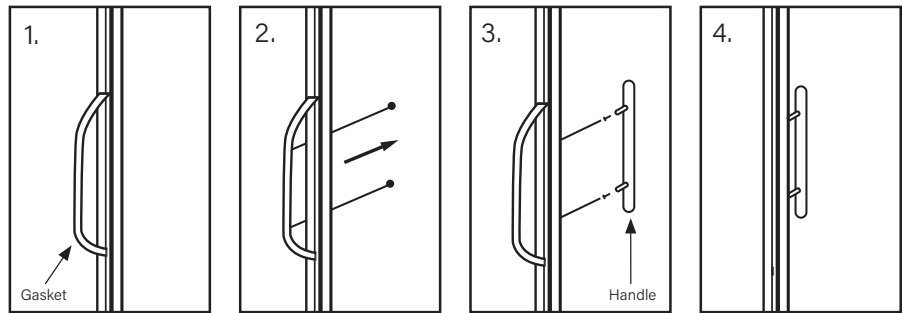

Operating Your Wine Cellar



Each wine cellar includes an operating panel on the front of the unit. This operating panel includes several features to operate and control the temperature.

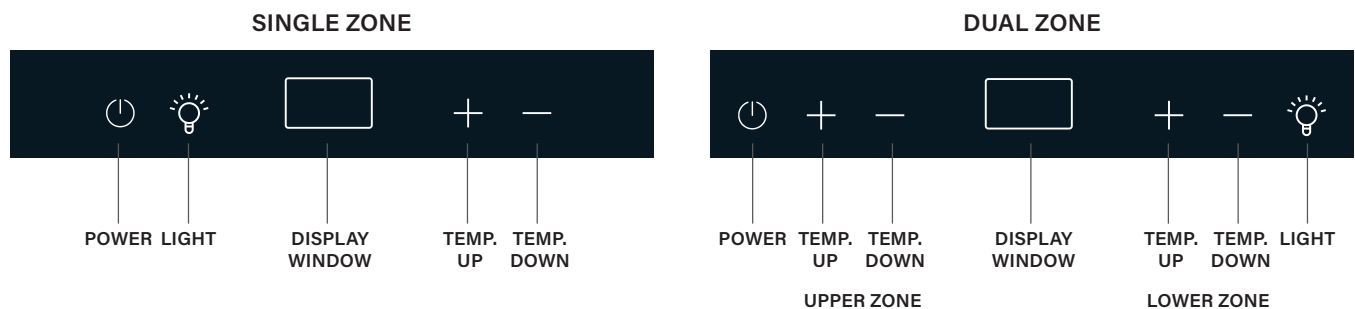



- Power:** Turns the Wine Cellar System ON and OFF (Hold for 3 seconds).
- Lighting:** Press lightly to turn the Interior Light ON and OFF.
- Control Panel Lock:**
 - Single Zone:** Simultaneously press the Temp UP (+) and Temp DOWN (-) buttons for 5 seconds to Lock or Unlock the control panel.
 - Dual Zone:** Simultaneously press the LEFT Temp UP (+) and LEFT Temp DOWN (-) buttons for 5 seconds to Lock or Unlock the control panel.
- Display Window:** Displays Set and Actual Temperature.
- Temperature Up:** Increases Set Temperature 1°F with Each Push of the Button.
- Temperature Down:** Decreases Set Temperature 1°F with Each Push of the Button.
- C/F:**
 - Single Zone:** Simultaneously press the Temp DOWN (-) button for 3 seconds to switch the temperature display between Fahrenheit to Celsius.
 - Dual Zone:** Simultaneously press the Temp UP (+) Temp DOWN (-) buttons (left side controls for Dual Zone) for 3 seconds to switch the temperature display between Fahrenheit to Celsius.

Control Panel Display

SINGLE ZONE

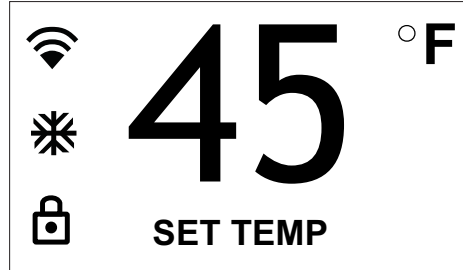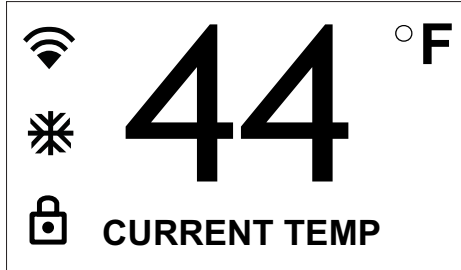

DUAL ZONE

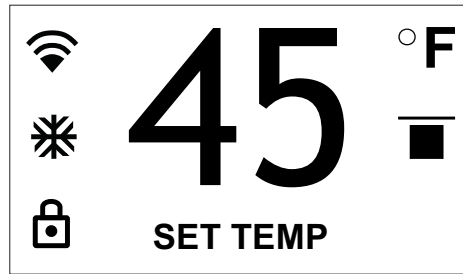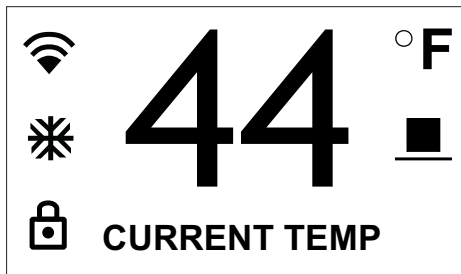

Icon Glossary



TEMP ALERT



CALL FOR SERVICE



CONTROL PANEL
LOCK



WI-FI



UPPER ZONE



LOWER ZONE



COMPRESSOR
ACTIVE



ADJUST LIGHTING
50%

Before You Start

The wine cellar should be placed in a location where the ambient temperature is between 61-90° Fahrenheit. If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause interior temperatures to fluctuate.

Setting the Temperature Control

NOTE: The temperature readout shows the actual cellar temperature, it will temporarily show the set temperature while making adjustments, then reverts back after 5 seconds.

1. Make sure power cord is connected to a properly grounded outlet.
2. Turn power ON.
3. **Single Zone:** Press the Temp UP (+) or Temp DOWN (-) button, the display will change to SET TEMP, use the + and - to change the temperature, exits automatically after 5 seconds.

Dual Zone: To program UPPER ZONE press and hold the Left Temp UP (+) for 3 seconds, the display will change to SET TEMP, use the + and - to change the temperature, exits automatically after 5 seconds.

To program LOWER ZONE press and hold the Right Temp UP (+) for 3 seconds, the display will change to SET TEMP, use the + and - to change the temperature, exits automatically after 5 seconds.

4. Temperatures increase or decrease 1°F with each push of the UP or DOWN button.

NOTE: Temperatures may fluctuate depending on whether the interior light is ON or OFF and depending on the position of the bottles.

Lock or Unlock the Control Panel

To LOCK or UNLOCK the control panel:

1. **Single Zone:** Simultaneously press the Temp UP (+) and Temp DOWN (-) buttons for 5 seconds.
Dual Zone: Simultaneously press the RIGHT Temp UP (+) and RIGHT Temp DOWN (-) buttons for 5 seconds.
2. The control panel will beep when the status has changed.

Interior Light

To complement the look of your wine collection, LED lighting has been built into the wine cellar. Simply press lightly the "Light" button and the light comes on, push again for off. For maximum energy efficiency, leave light off when not viewing your collection.

Adjusting the Light Intensity

You can adjust the intensity of the LED lighting from 100% down to 25%

- Unlock the control panel if it is locked.
- Press and hold the LIGHT button for 5 seconds. The display will show the ADJUST LIGHTING icon and light intensity percentage.
- Use the Temp UP (+) and DOWN (-) buttons (Right side control for Dual Zone) to change the intensity: 25%, 50%, 75%, 100%. The display will show the Light Icon and percentage. This setting would become default light setting.
- You will exit 'light set mode' automatically after 5 seconds of inactivity.

Door Lock

- This unit comes with key lock.
- The keys are located inside the plastic bag along with the user manual. To unlock the door, insert the key into the lock and turn counter clockwise.
- To lock the door, simply reverse the operation making sure the metal pin is engaged completely.
- Then remove the key and place it in a secure place for safekeeping.

Normal Operating Sounds You May Hear

- Boiling water, gurgling sounds or slight vibrations that are the result of the refrigerant circulating through the cooling coils.
- The thermostat control will click when it cycles on and off.

Wi-Fi Pairing

- When connecting your VinoView wine cellar to the Wine Enthusiast Cellars Smart Remote App you might need to activate the pairing mode to make a connection.

Single Zone: Press and hold the TEMP UP (+) button for 5 seconds, the Wi-Fi icon will begin flashing.


Dual Zone: Press and hold the LEFT TEMP DOWN (-) button for 5 seconds, the Wi-Fi icon will begin flashing.

Installing the App




1.

Scan this QR Code to download the free Wine Enthusiast Cellars Smart Remote App.

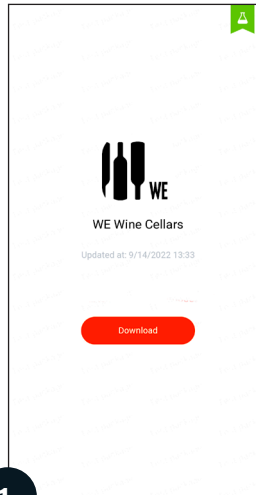


1.

Press 'Download'

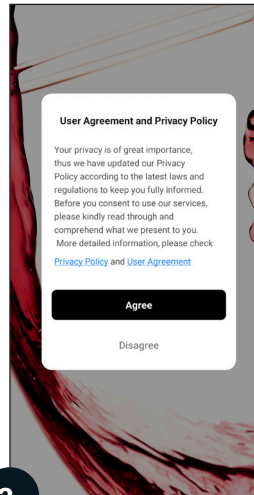


2.

Read and press 'Agree' to the User Agreement and Privacy Policy.

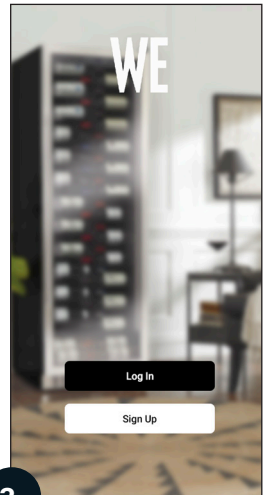

3.


Press 'Sign Up' to create an account.

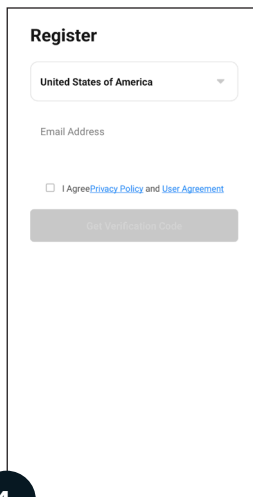

4.


Enter your email address, and check 'I Agree to the Privacy Policy and User Agreement.'

- You can review each document by pressing on the highlighted text
- Then press the 'Get Verification Code' button.

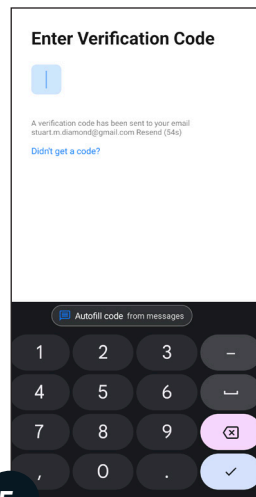


5.

Check your email for the verification code, enter the code.

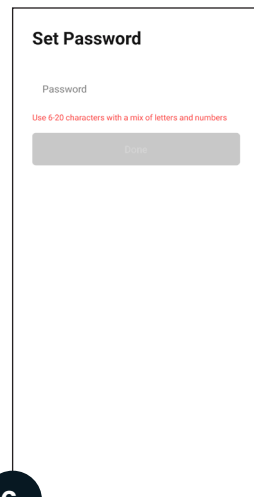

6.


Set your password. Use 6 to 20 characters with a mix of letters and numbers. Be sure to write this down and keep it in a secure place.

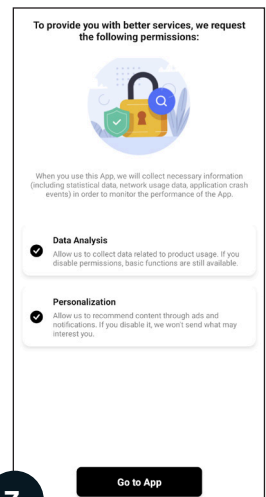

7.


Review the Data Analysis and Personalization permission, leave checked or unchecked, then press 'Go to App'.

How to Connect to Your Wine Cellars

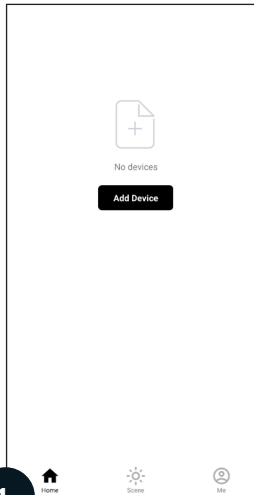

1.


Press the 'Add Device' icon on the screen to add a new wine cellar. Ensure that Wi-Fi and Bluetooth are both ON.

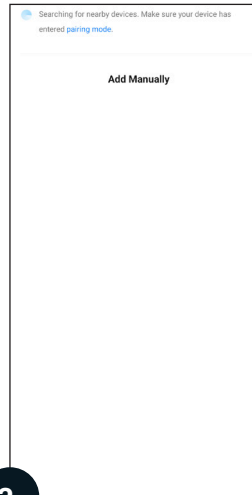

2.


The App will automatically search for an available wine cellar.

- Be sure the App permissions is set to ALLOW Nearby Devices.
- Your wine cellar is in pairing mode (Wi-Fi icon is flashing on the temperature display).

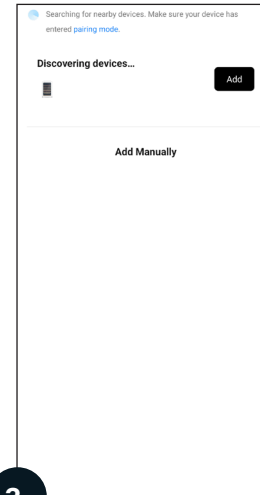


3.

The App should list Discovering Devices. Press 'Add' on the wine cellar you want to add.

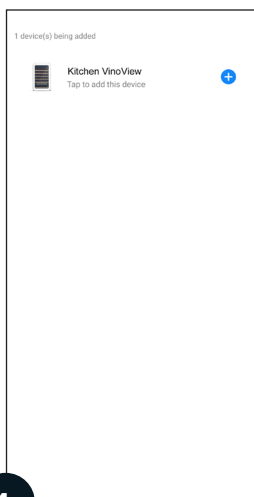

4.


The App will list the wine cellar (again). Press the + icon next to the listed cellar.

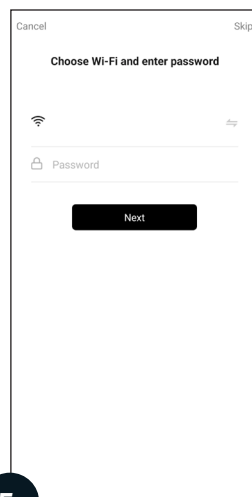

5.

Select your Wi-Fi from the list and then enter the password.

- The Wi-Fi module will connect with 2.4 or 5 GHz routers.
- Press 'Next'

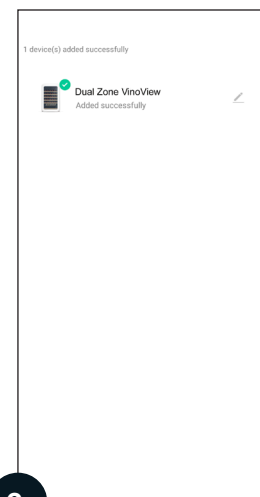


6.

Your wine cellar will now connect to the Wi-Fi router, this may take a few minutes, please be patient.

- Press the wine cellar icon to go to the control panel.

How to Connect to Your Wine Cellars

(continued)

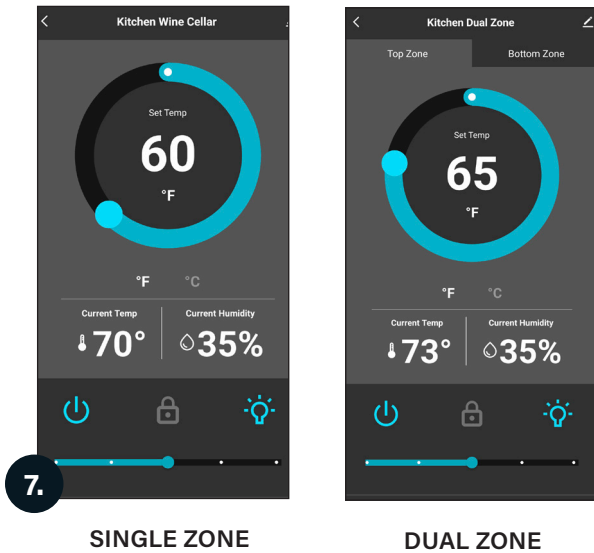

You can view and adjust the temperature by sliding your finger over the wheel.

- Change the temperature display from Fahrenheit to Celsius by pressing the F or C, pressing the LOCK icon.
- Lock/Unlock the temperature controls by pressing the LOCK icon.
- Change the intensity of the LED Lighting by sliding the light adjustment bar left to right (0% - 25% - 75% - 100%).
- Turn the Lights ON and OFF by pressing the LIGHT icon.
- To customize the display, press the pencil icon on the top right corner.

Please note: the Current Humidity is not adjustable.

Customizing Settings



1. Press the pencil icon on the top right corner of this screen.

2. To change the name of the wine cellar press the arrow on the right of the name.

3. To change the image, press the arrow to the right of the word ICON, you can upload a photo or use your camera to take a picture of the cellar you want to add.

4. You can control multiple units from this one App, press 'Home' to see a list of all connected units.

Technical Data

VINOVIEW L SPECIFICATIONS	SINGLE ZONE (each unit)	DUAL ZONE (each unit)
INSTALLATION TYPE	Freestanding or Built-In	
ELECTRICAL REQUIREMENTS	115 ~ 60Hz	
PROTECTION CLASS	I	
CLIMATE CLASS	T	
AMBIENT TEMPERATURE	61°F – 90°F	
TEMPERATURE CONTROL RANGE	40°F – 72°F	Upper & Lower Zones: 40°F – 72°F
TOTAL VOLUME	15.1 Cu. Ft.	
RATED POWER INPUT	160 Watts	
RATED CURRENT	1.6 Amps	
START-UP AMPS	2.0 Amps	
RUNNING AMPS	1.6 Amps	
REFRIGERANT	R600A, 1.94 oz	
ENERGY CONSUMPTION	245 kWh/year	
PLUG TYPE	Standard NEMA5-15P Plug with SJT 3X18AWG Cord	
BREAKER SIZE	15 Amp Line*	
DECIBEL RATING	39 dB(A)	
APPROXIMATE NET WEIGHT	270 lbs	
DIMENSIONS	23½"W x 26¾"D x 72¼"H	

* Multiple Unit Note: If there is more than one cellar on a line, a 20 Amp circuit is required for every 2 units.

PLEASE NOTE: The Double wine cellar is actually two units with opposing hinges and the Quad wine cellar is actually four single units, side by side, with opposite hinged doors. Each unit will have its own power cord and every two units combined electric power requires a dedicated 20 amp outlet.

U.S. Design Patent No. D847,220



CONFORMS TO
UL STD. 471
CERTIFIED TO
CSA STD. C22.2
NO. 120

FCC ID: 2ANDL-WBR3D

Proper Wine Cellar Care, Cleaning & Maintenance

General

- Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with 2 cups of warm water or use one part Borax for ten parts water (about one cup per gallon). Use sponge or soft cloth, dampened with the cleaning solution, to wipe down your wine cellar.
- Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your wine cellar.



WARNING!

To avoid electric shock always unplug your cellar before cleaning. Ignoring this warning may result in death or injury.

CAUTION!

Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

Mold on the Interior

Microscopic mold spores are naturally occurring and present in the ambient air. When mold gets in your wine cellar it may grow within the humid environment. Removal can be completed with mild solutions of commonly available products such as Borax, vinegar, or baking soda.

Door Gaskets

- Clean door gaskets every three months according to general instructions. Gaskets must be kept clean and pliable to assure a proper seal.
- Petroleum jelly applied lightly on the hinge side of gaskets will keep the gasket pliable and assure a good seal.

Power Interruptions

Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When power has been restored, **wait 3 to 5 minutes** then re-plug the power cord to AC outlet.

Vacation and Moving Care

- For long vacations or absences, unplug the wine cellar and clean the wine cellar and door gaskets according to "General Cleaning" section. Leave doors open, so air can circulate inside.
- Always move the wine cellar vertically. Do not move with the unit lying down, as possible damage to the sealed system could occur.

Note: After moving, wait for 24 hours before plugging in the wine cellar.

Troubleshooting Guide

Many common issues with your wine cellar can be easily solved. Try the troubleshooting tips below if you experience any problems.

Wine Cellar Does Not Operate:

- Check if wine cellar is plugged in.
- Check if there is power in the AC outlet, by checking the circuit breaker.

Wine Appears Too Warm:

- Door may have been opened too frequently or for an extended period of time.
- Allow time for recently added wine to reach desired temperature.
- Check door gasket for proper seal.
- Clean condenser coils.
- Adjust temperature control to colder setting.

Wine Appears Too Cold:

- If temperature control setting is too cold, adjust to a warmer setting.

Wine Cellar Runs Too Frequently:

- This may be normal to maintain constant temperature during high temperature and humid days.
- Doors may have been opened frequently or for an extended period of time.
- Clean condenser coils.
- Check door gasket for proper seal.
- Check to see if doors are completely closed.

Moisture Build-Up on Interior or Exterior of the Wine Cellar:

- This is normal during high humidity periods.
- Prolonged or frequent door openings.
- Check door gasket for proper seal.

Wine Cellar Door Does not Shut Properly:

- Level the wine cellar.
- Check for blockages e.g. wine bottles, shelves.

Limited Warranty

This Warranty Covers Appliances within the Continental United States Only.

How to Get Warranty Service:

In the event your wine cellar is not operating within the manufacturer's specifications, during the Warranty Period, contact Customer Care at <http://help.wineenthusiast.com> or by phone 800.648.6058.

Length of Warranty:

This Limited Warranty lasts for one (1) year from date of receipt of purchase of the wine cellar ("Limited Warranty Period") and the sealed system (compressor, condenser, evaporator) will be covered for three (3) years. Extended warranties may be available for an additional cost at the time of purchase or up to 30 days from date of purchase. These extended warranties would extend this one (1) year limited warranty to two (2), three (3), or five (5) years. Details about our extended protection plans can be found at wineenthusiast.com.

Who is Protected:

This Limited Warranty protects the original purchaser during the Limited Warranty Period, provided that such purchaser can present appropriate proof of original purchase.

What is Covered:

This Limited Warranty covers any defects in workmanship or materials in your new wine cellar under normal use.

What is Not Covered:

The following are not covered by this Limited Warranty: damage due to such things as accident, misuse, abuse, mishandling, neglect, unauthorized repair, failure to properly maintain, acts of God or any other cause beyond the reasonable control of the Wine Enthusiast whether similar or dissimilar to the foregoing.

Commercial use or use other than normal household or small office.

Purchaser understands and acknowledges that the wine cellar is a wine refrigerator, which houses wine. Purchaser assumes all the risk of using these units, including risk of spoilage, humidity variations, temperature variations, leaks, fires, water damage, mold, mildew, dryness and similar perils that may occur.

What We Will Do:

During the Limited Warranty Period, Wine Enthusiast and/or the manufacturer will, at its sole discretion, repair or replace any wine cellar not operating within the manufacturer's specifications. All costs for labor and materials thereto shall be covered during the Limited Warranty Period. If Wine Enthusiast deems the wine cellar is not repairable, Wine Enthusiast will use the value of your original order toward a replacement; provided, however, that the purchaser will be responsible for all shipping and handling costs with respect to the replacement after the initial ninety (90) days after the date of receipt of original purchase. ***After the initial ninety (90) day period after the date of receipt of purchase, purchaser must pay any shipping and handling charges that are incurred in shipping or transporting the wine cellar for service under this Limited Warranty.*** Wine Enthusiast reserves the right to substitute materials of substantially similar quality in the event that identical materials are not available at the time the Limited Warranty services are performed. Wine Enthusiast reserves the right to request that purchaser contact a local refrigeration company to service the wine cellar.

How to Get Warranty Service:

In the event your wine cellar is not operating within the manufacturer's specifications, during the Warranty Period, contact Customer Care at <http://help.wineenthusiast.com> or by phone 800.648.6058.

Limitation of Implied Warranties:

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this Limited Warranty.

Exclusion of Certain Damages:

Wine Enthusiast's liability is limited to replacement or repair of the defective wine cellar. Wine Enthusiast shall not be liable for any damages, whether incidental, consequential or otherwise, because of any defective wine cellar.

How State Law Applies:

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you. The Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your Cheat Sheet to Wine Serving Temperatures

Too many people pour wine at the wrong temperature destroying its decadent flavors and aromas. Serve your bottlings at perfect temperatures. Here's everything you need to know.

STYLE OF WINE	EXAMPLE	RECOMMENDED SERVING TEMPERATURE
Sweet Wines	Sauternes	Well Chilled 43°F–48°F (6°C– 9°C)
Sparkling Wines	Champagne	Chilled 45°F–49°F (7°C– 9°C)
Light-, Medium-Bodied White Wines	Chenin Blanc	Chilled 45°F–49°F (7°C– 9°C)
Full-Bodied White Wines	Oaked Chardonnay	Lightly Chilled 48°F–55°F (9°C– 13°C)
Light-Bodied Red Wines	Beaujolais	Room Temperature or Lightly Chilled 53°F–55°F (11°C– 13°C)
Medium-, Full-Bodied Red Wines	Tempranillo	Room Temperature 60°F–65°F (15°C– 18°C)

WINE ENTHUSIAST®

800.648.6058 • Valhalla, New York 10595
