



VI355T Wine cooler Installation

1. Keep space at least 4-6mm between two wine cabinets; (please refer the following drawing①)
2. Two doors should be alignment before install, please refer ③ view to operate if the doors aren' t alignment; (please refer the following drawing②)
3. Please adjust the cabinet legs to keep two doors alignment level; (please refer the following drawing③)

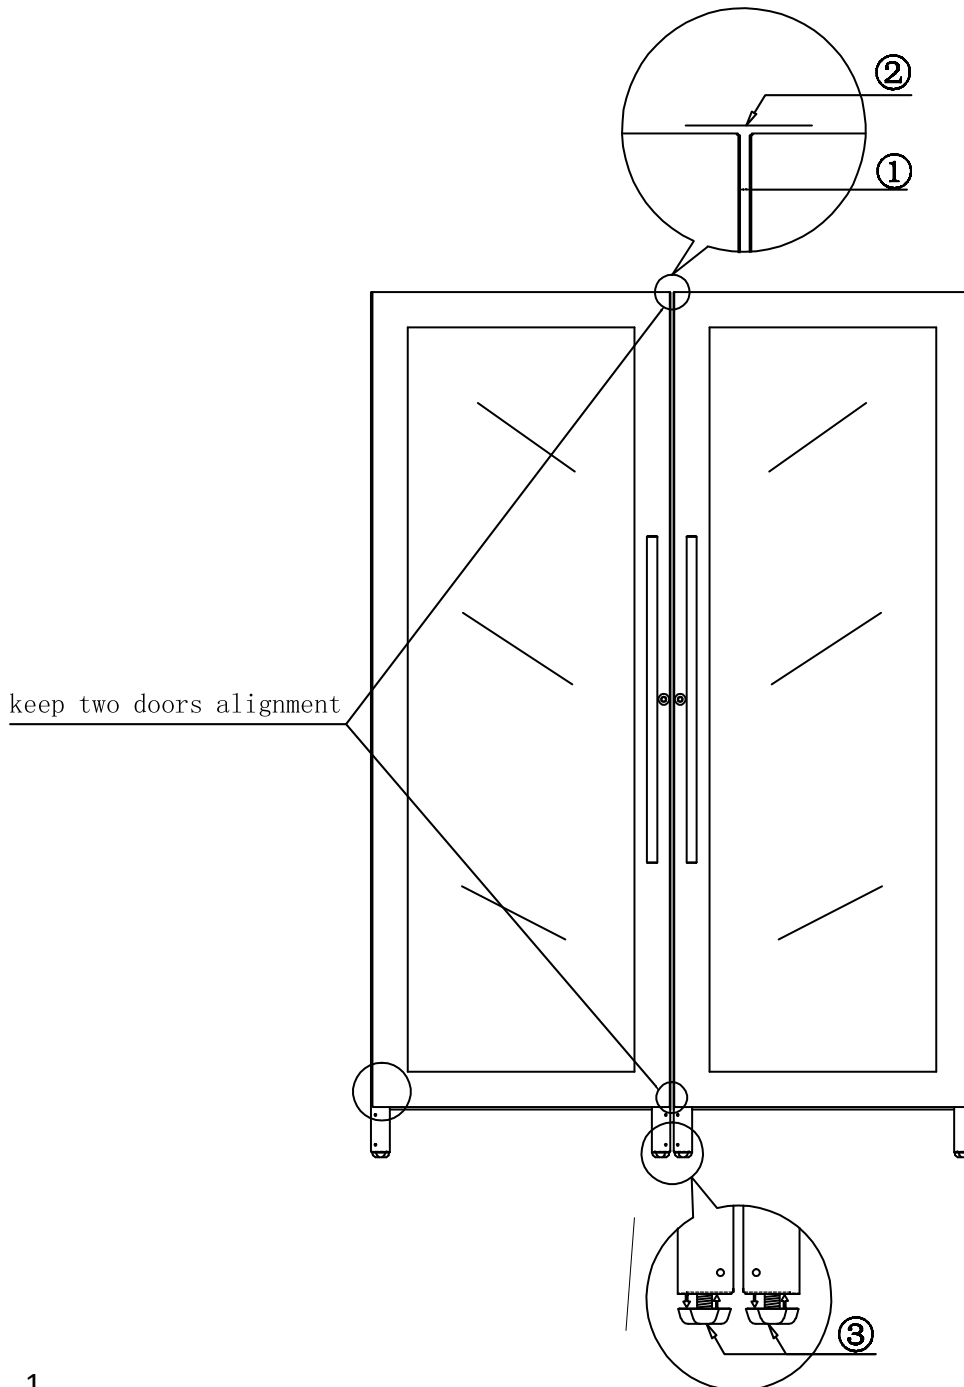

4. Take out the 4pcs of decorative nails from the wine cabinets, then install the upper and lower connection part with hexagon screwdriver for two wine cabinets; (please refer the following drawing④&⑤)

5. To insert the T-shape decoration strip into the 5mm gap between two wine cabinets ,and keep smooth and stable; (please refer the following drawing⑥)

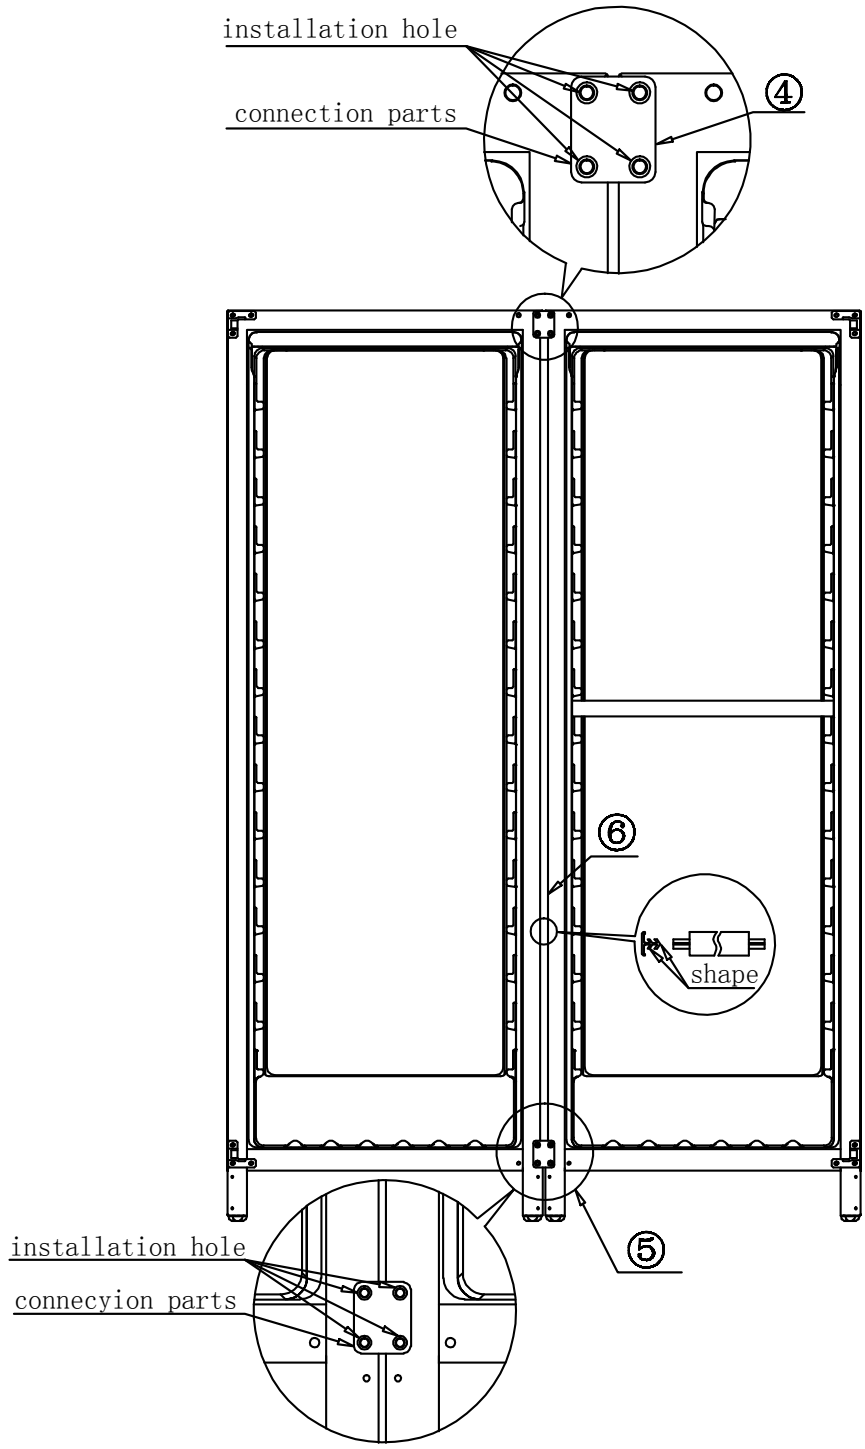

6. To install 2 in 1 stainless steel ventilation plinth, fix the cross-head screw on the plinth with phillips screwdriver; (please refer the following drawing⑦)

