

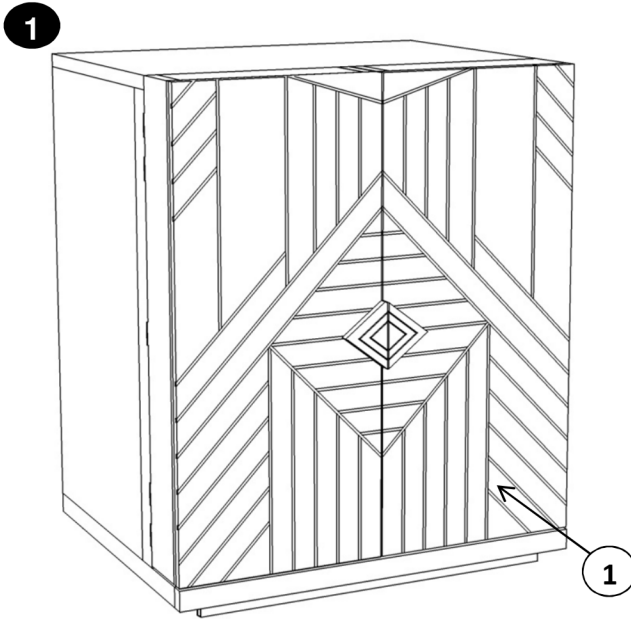


ASSEMBLY INSTRUCTION SHEET FOR CHEVERNY METAL INLAY BAR CABINET

CODE : 3370205

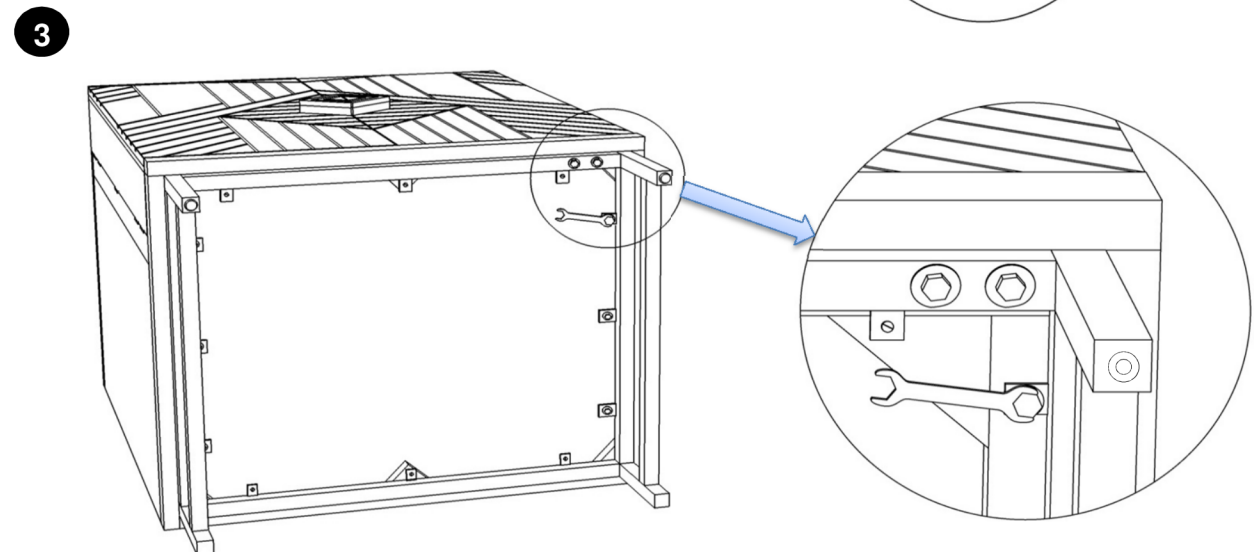


<p>15 MIN</p>	
<p>1</p> <p>X1</p>	<p>2</p> <p>X2</p>
<p>A</p> <p>8X25 X14</p>	<p>B</p> <p>8X20 X14</p>
<p>C</p> <p>X1</p>	<p>D</p> <p>X8</p>

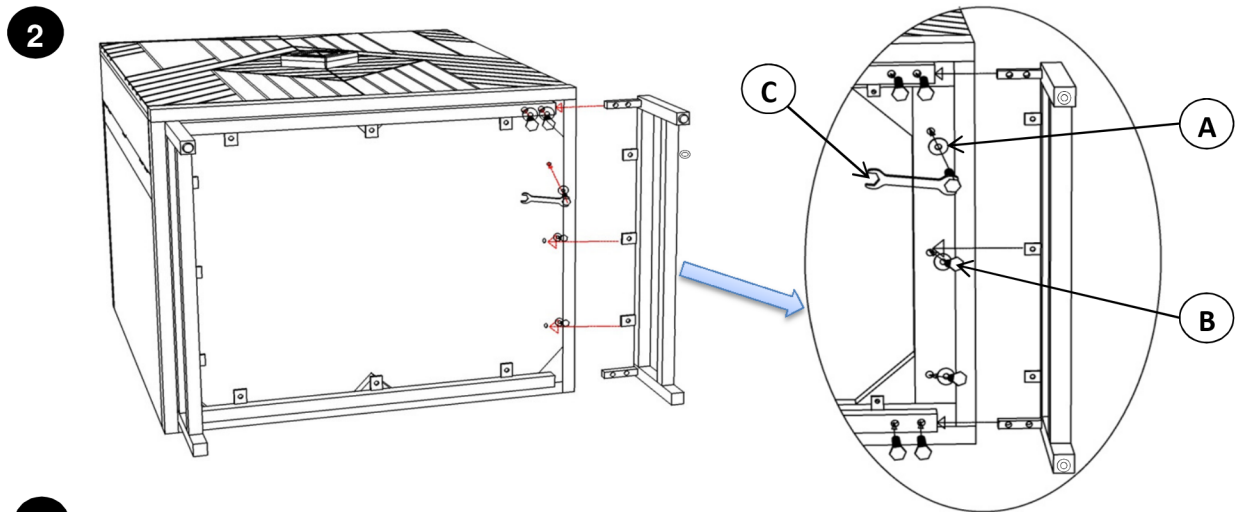

ASSEMBLY INSTRUCTION SHEET FOR CHEVERNY METAL INLAY BAR CABINET

CODE : 3370205

4

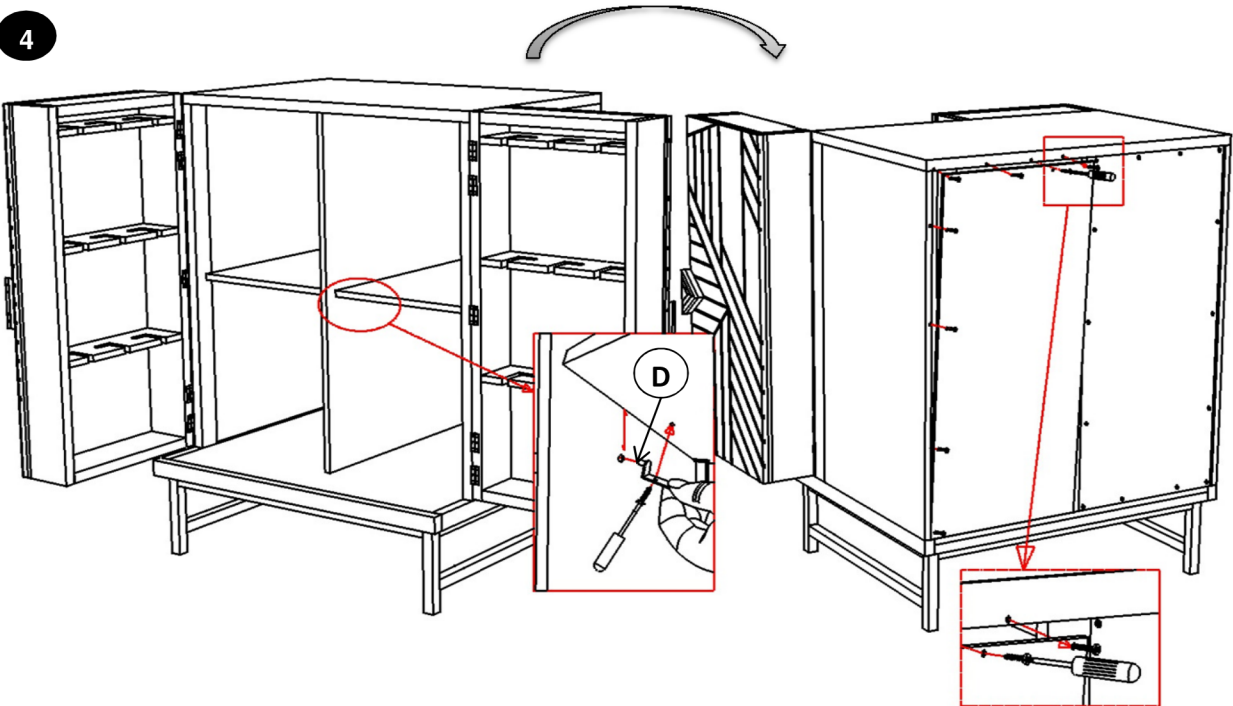

“In order to place a fridge inside the furniture, please remove MDF backing. If fridge is included, you must leave space between the back of the furniture and wall for ventilation”

5

